


High Performance - Healthcare

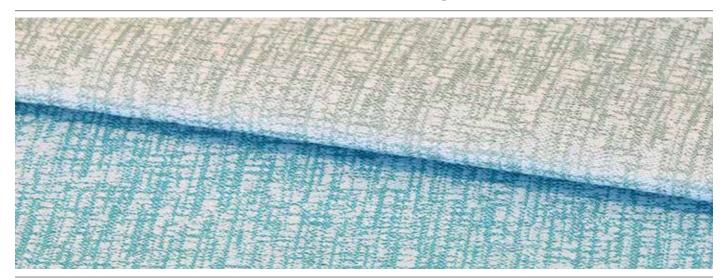

COMPOSITION 100% polyester

WIDTH 220cm

(width becomes length when railroaded)

WEIGHT 219gsm

PATTERN REPEAT H 16.8cm V 17.5cm (railroaded)

ROLL SIZE 50m approx.

CARE CODE Curtain/Bedspread: Polyester Healthcare

Partition/Wall Panel: Screen Care

Soft Furnishing: Polyester Soft Furnishings

LIGHTFASTNESS 6+

AS 2001.4.21

FIRE RATINGS Ignitability 0
AS/NZS 1530.3 Spread of Flame 0
Heat Evolved 0

Smoke Developed 0-1

AS/NZS 3837 BCA Group 1

Av. Specific Extinction Area 497.8 m2/kg

APPLICATION curtains, privacy screens, bedspreads,

screens, partitions, wall panels Note: protect curtains with suitable lining if exposed to direct sunlight

Made in Australia

PERFORMANCE

ORIGIN

- Reversible design
- Easy to wash, quick drying with minimal shrinkage
- Designed to withstand hospital and healthcare laundry and performance standards:
- AS/NZS 4146 Australian and New Zealand Standard for Laundry Practice
- AS3789.9 Textiles for healthcare facilities and institutions:
 Curtains and patient bedscreens: fabric performance properties for colourfastness
- AS2663.1 Textiles fabrics for window furnishings: Uncoated fabrics - dimensional change

ENVIRONMENT + GREEN STAR

- Oeko Tex certified polyester yarn
- Reduced water and energy consumption, recycling of waste
- SKETCH can be used on white vertical surfaces certified by Ecospecfier, AFRDI, ECNZ and GECA
- The Green Star Rating Tool states "Where at least 90% of an item's mass is certified to a GBCA recognised standard, the item can be entered as a certified product at Level A, B or C." Therefore any fabric can be used as fabrics are almost always under 10% by weight of a furniture item

LAUNDRY GUIDELINES FOR THERMAL DISINFECTION

Laundry Sorting

- Wash separately. Do not wash with cotton articles
- Colours, whites and heavily soiled articles should be washed separately

Washing

- Use a reduced load (approx 1/2 of usual
- Break wash 59-68°F (15-20°C) for 3 minutes with detergent (Do not wash with soap)
- Main wash 167-176°F (75-80°C) for 12 minutes with detergent as above
- A chlorine based disinfectant may be used

Rinsing

- Rinse thoroughly
- Avoid crash cooling which causes excessive and permanent creasing
- Rinse a second time with cold water
- Do not use softener or fabric conditioner without prior testing its effect on polyester fabrics

Drying

- Short tumble dry Max 176°F (80°C)
- Do not overdry as this causes static
- For calendering ensure articles have a residual moisture of 20

 30%
- Keep dry wash below 248°F (120°C) on calender

Note: Please contact your account manager for Screen Care Instructions or Polyester Soft Furnishing Care Instructions

